

## IDAutomation SC5USB-D: Check Digit for Code 39

Check Digit must be enabled in the barcode.

**NOTE:** If CheckSum Verification is enabled, CheckSum Transmission must be disabled. This will verify that the barcode check digit is correct. If CheckSum Transmission is enabled, CheckSum Verification must be disabled. This will transmit the check digit in the scan. Only one feature can be set at a time.

### 1. Scan the Program Barcode



### 2. To set CheckSum Verification, Scan:



OR

 
To set CheckSum Transmission, Scan:



### 3. To enable the feature, Scan 0, 1 (to disable feature, Scan 0,0)



### 4. Scan Finish Barcode



### 5. Scan the Exit Barcode

