


IDAutomation SC5USB-D: Enable GS1 Databar Expanded


1. Scan the Program Barcode

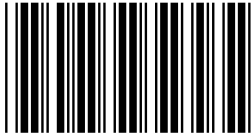

2. Scan the Read Barcode



3. To enable the Expanded scan 0, 1 (or to disable Expanded scan 0,0)

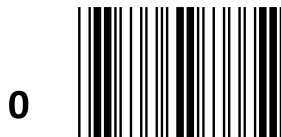

4. Scan Finish Barcode



5. Scan the Exit Barcode

