

IDAutomation SC5USB: Scan Inverted (Negative) Barcodes


1. Scan the Program Barcode




2. Scan the Read Barcode



3. To enable Inverted barcode scan 0, 1 (disable Inverted barcode scan 0,0)

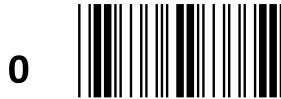

4. Scan Finish Barcode

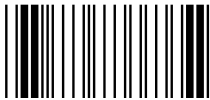

5. Scan the Exit Barcode



Test Scan Barcode(Data is 12345):

