

## IDAutomation SC5USB-D: Preamble and Postamble Transmission

**Preamble/ Postamble characters:** Preamble or Postamble characters will be appended to the data automatically for all symbologies. However, the transmission will not activate unless Preamble / Postamble transmission is enabled. To set the transmission to active, use:

### 1. Scan the Program Barcode



### 2. Scan the Preamble or Postamble Barcode



### 3. To enable Preamble or Postamble Transmission, scan 0, 1. To disable Preamble or Postamble Transmission, scan 0,0.



### 4. Scan Finish Barcode



### 5. Scan the Exit Barcode



