

## **IDAutomation SC1500: Program Continuous Mode**

The scanner is always scanning. After a successful decoding, the removal of barcode is required. It is not allowed to proceed to decode until the decoding delay time has passed. To decode the same barcode repeatedly, move away the barcode and put it back again and again for scanning.

- 1. Scan the Enter Set up Barcode**




- 2. Scan Set Continuous Mode Barcode or to return to Laser Mode Barcode (the scanner default).**

**Set Continuous Mode**



**Or**

**Laser Mode (scanner default)**

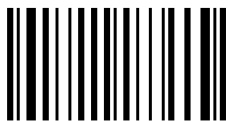

- 3. Scan the Update Barcode to complete programming.**

