

IDAutomation SC5USB-D: Enable FULL ASCII (Extended 39)

1. Scan the Program Barcode



2. Scan the Format Barcode



3. To enable the feature scan 0, 1 (or to disable Full ASCII scan 0,0)



4. Scan Finish Barcode



5. Scan the Exit Barcode

