

## **IDAutomation SC5USB-D: Enable GS1 Databar Expanded**

### **1. Scan the Program Barcode**



### **2. Scan the Read Barcode**



### **3. To enable the Expanded scan 0, 1 (or to disable Expanded scan 0,0)**



### **4. Scan Finish Barcode**



### **5. Scan the Exit Barcode**

