

IDAutomation SC1500: Code 128 Decode FNC may be translated according to the GS1-128 (UCC/EAN-128) format if it starts with an FNC1 character. When enabled, the first FNC1 will be translated to “]C1”,

- 1. Scan the Enter Set up Barcode**



- 2. Enable or Disable GS1-128**

Enable GS1-128



OR

Disable GS1-128



- 3. Decide whether to include the Code ID ("]C1") in the data being transmitted.**

Enable]C1 /Transmit Code ID



OR

Disable]C1 /Transmit Code ID



- 4. Scan the Update Barcode to complete programming.**



