

SC5USB Wireless Setup - Linking the scanner with the cradle

Follow these instructions to link the two devices:

1. Connect power to the cradle. The radio LED (marked with a light symbol) will blink amber and the cradle will beep.



2. Read the link label on the bottom of the cradle with the scanner. The scanner will sound a good read beep and the LED will flash amber.



3. After 15-20 seconds, the scanner will emit a loud beep and the scanner and cradle light will become green.



Additional Notes:

Once a scanner is linked to a cradle, they will remain linked until specific action is taken to unlink them. They will remain linked if the cradle is unplugged, if the battery is removed from the scanner or if the entire charge is used up, and if the scanner is taken out of range of the cradle. Under normal operation, scanning of the link label will only be required once in the life of the product.