


IDAutomation SC7USB 2D: Program a Function or character(s), such as a TAB, as the Prefix or Suffix.


- 1. Determine where you want the function to appear: as a prefix (function appears before the barcode scan) or suffix (function appears after the barcode scan). Scan the Prefix or Suffix Barcode**

Prefix

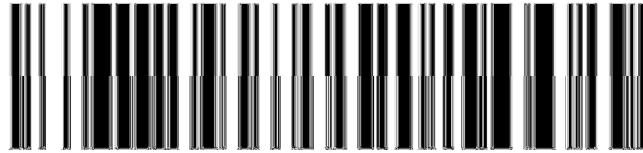


Or

Suffix

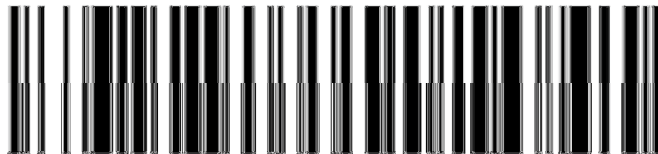

- 2. To enable Prefix or Suffix for all Symbologies, scan the barcode two times.
Scan this barcode two times.**

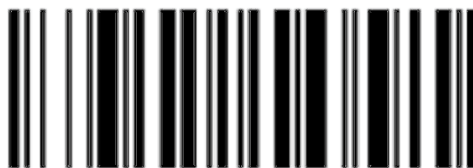

- 3. Determine the type of function to enter using the ASCII Code Table. For example, a Horizontal Tab (HT) is 09. Scan the coordinates of the function to produce using the Programming Chart.**

(Other examples)

CR (Carriage Return or Enter) is 0,D.

ESC (Escape key) is 1,B


ASCII Code Table

Dec	Hex	Char	Dec	Hex	Char	Dec	Hex	Char	Dec	Hex	Char
0	00	NUL	32	20		64	40	@	96	60	`
1	01	SOH	33	21	!	65	41	A	97	61	a
2	02	STX	34	22	"	66	42	B	98	62	b
3	03	ETX	35	23	#	67	43	C	99	63	c
4	04	EOT	36	24	\$	68	44	D	100	64	d
5	05	ENQ	37	25	%	69	45	E	101	65	e
6	06	ACK	38	26	&	70	46	F	102	66	f
7	07	BEL	39	27	'	71	47	G	103	67	g
8	08	BS	40	28	(	72	48	H	104	68	h
9	09	HT	41	29	)	73	49	I	105	69	i
10	0A	LF	42	2A	*	74	4A	J	106	6A	j
11	0B	VT	43	2B	+	75	4B	K	107	6B	k
12	0C	FF	44	2C	,	76	4C	L	108	6C	l
13	0D	CR	45	2D	-	77	4D	M	109	6D	m
14	0E	SO	46	2E	.	78	4E	N	110	6E	n
15	0F	SI	47	2F	/	79	4F	O	111	6F	o
16	10	DLE	48	30	0	80	50	P	112	70	p
17	11	DC1	49	31	1	81	51	Q	113	71	q
18	12	DC2	50	32	2	82	52	R	114	72	r
19	13	DC3	51	33	3	83	53	S	115	73	s
20	14	DC4	52	34	4	84	54	T	116	74	t
21	15	NAK	53	35	5	85	55	U	117	75	u
22	16	SYN	54	36	6	86	56	V	118	76	v
23	17	ETB	55	37	7	87	57	W	119	77	w
24	18	CAN	56	38	8	88	58	X	120	78	x
25	19	EM	57	39	9	89	59	Y	121	79	y
26	1A	SUB	58	3A	:	90	5A	Z	122	7A	z
27	1B	ESC	59	3B	;	91	5B	[	123	7B	{
28	1C	FS	60	3C	<	92	5C	\	124	7C	
29	1D	GS	61	3D	=	93	5D	]	125	7D	}
30	1E	RS	62	3E	>	94	5E	^	126	7E	~
31	1F	US	63	3F	?	95	5F	_	127	7F	


Dec	Hex	Char	Dec	Hex	Char	Dec	Hex	Char	Dec	Hex	Char
128	80	€	160	A0		192	C0	À	224	E0	à
129	81	□	161	A1	ı	193	C1	Á	225	E1	á
130	82	,	162	A2	ç	194	C2	Â	226	E2	â
131	83	f	163	A3	£	195	C3	Ã	227	E3	ã
132	84	„	164	A4	„	196	C4	Ä	228	E4	ä
133	85	...	165	A5	¥	197	C5	Å	229	E5	å
134	86	†	166	A6	‡	198	C6	/E	230	E6	æ
135	87	‡	167	A7	§	199	C7	Ç	231	E7	ç
136	88	ˆ	168	A8	ˆ	200	C8	È	232	E8	è
137	89	‰	169	A9	©	201	C9	É	233	E9	é
138	8A	Š	170	AA	±	202	CA	Ê	234	EA	ê
139	8B	ı	171	AB	«	203	CB	Ë	235	EB	ë
140	8C	œ	172	AC	˜	204	CC	Ì	236	EC	ì
141	8D	□	173	AD	-	205	CD	Í	237	ED	í
142	8E	Ž	174	AE	®	206	CE	Î	238	EE	î
143	8F	□	175	AF	˘	207	CF	Ï	239	EF	ï
144	90	□	176	B0	*	208	D0	Ð	240	FO	ð
145	91	˙	177	B1	±	209	D1	Ñ	241	F1	ñ
146	92	˙	178	B2	²	210	D2	Ò	242	F2	ó
147	93	˙	179	B3	³	211	D3	Ó	243	F3	ó
148	94	˙	180	B4	˙	212	D4	Ô	244	F4	ô
149	95	˙	181	B5	µ	213	D5	Õ	245	F5	õ
150	96	—	182	B6	¶	214	D6	Ö	246	F6	ö
151	97	—	183	B7	˙	215	D7	×	247	F7	×
152	98	˘	184	B8	,	216	D8	Ø	248	F8	ø
153	99	™	185	B9	˙	217	D9	Ù	249	F9	ù
154	9A	š	186	BA	±	218	DA	Ú	250	FA	ú
155	9B	›	187	BB	»	219	DB	Û	251	FB	û
156	9C	œ	188	BC	¼	220	DC	Ü	252	FC	ü
157	9D	□	189	BD	½	221	DD	Ý	253	FD	ý
158	9E	ž	190	BE	¾	222	DE	Þ	254	FE	þ
159	9F	Ÿ	191	BF	¿	223	DF	ß	255	FF	ÿ

Programming Chart

A

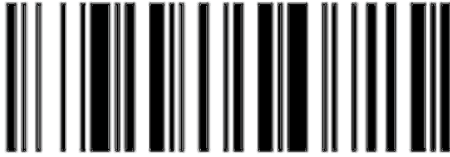


B

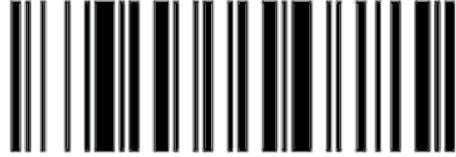


C




D

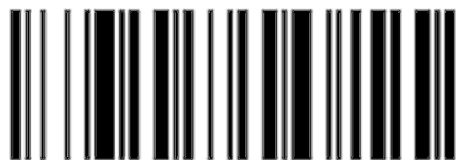


E

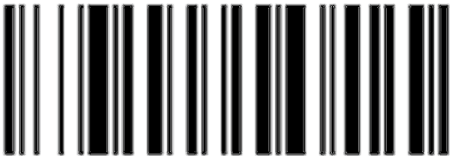


F

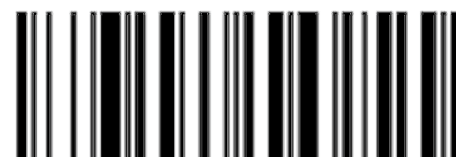


0

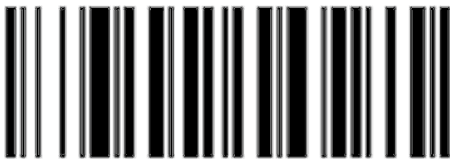


1

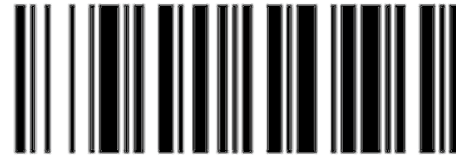


2

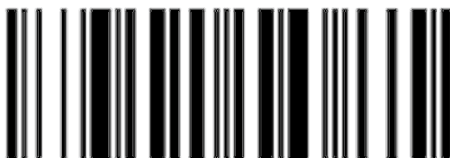


3

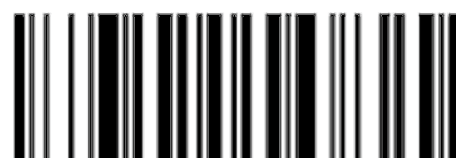


4

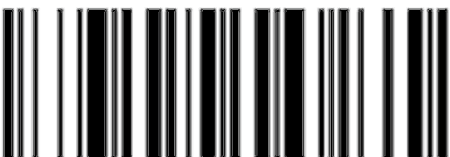

5

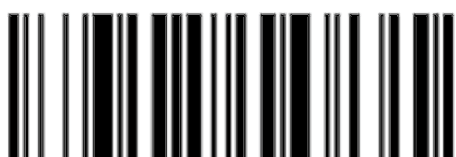


6

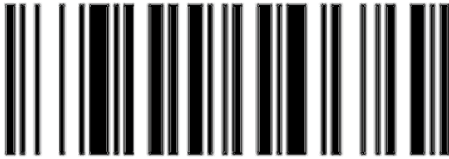


7



8

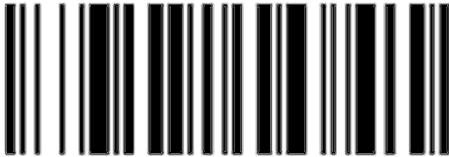


9

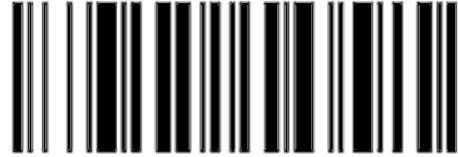

4. Scan Save (to save changes) or Discard (to delete changes).

SAVE

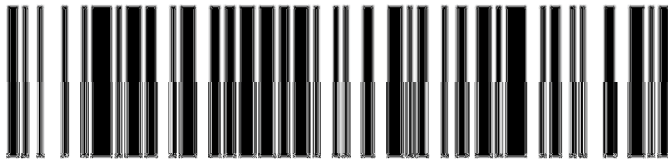

Or

Discard (to delete changes)

