


IDAutomation SC5USB-D: Enable Code 93

1. Scan the Program Barcode

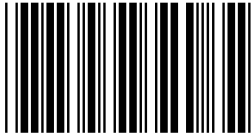


2. Scan the Read Barcode



3. To enable Code 93 scan 0, 1 (or to disable Code 93 scan 0,0)



4. Scan Finish Barcode

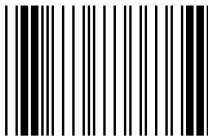

5. Scan the Exit Barcode

