



IDAutomation SC5USB-D: Enable GS1 Databar Limited



1. Scan the Program Barcode

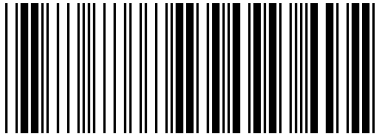

2. Scan the Read Barcode

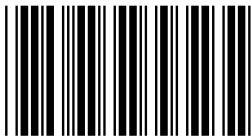

3. To enable the Limited scan 0, 1 (or to disable Limited scan 0,0)

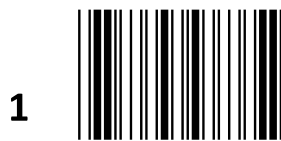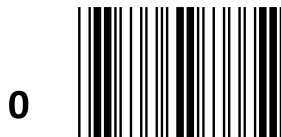

4. Scan Finish Barcode



5. Scan the Exit Barcode

