

IDAutomation SC5USB: Disable the Default Carriage Return

1. Scan the Program Barcode



2. Scan the Suffix Barcode



3. To disable the default Carriage Return, scan 0 twice:



4. Scan Finish Barcode



5. Scan the Exit Barcode

