

IDAutomation SC5USB-D: Preamble and Postamble Transmission

Preamble/ Postamble characters: Preamble or Postamble characters will be appended to the data automatically for all symbologies. However, the transmission will not activate unless Preamble / Postamble transmission is enabled. To set the transmission to active, use:

1. Scan the Program Barcode



2. Scan the Preamble or Postamble Barcode



3. To enable Preamble or Postamble Transmission, scan 0, 1. To disable Preamble or Postamble Transmission, scan 0,0.



4. Scan Finish Barcode



5. Scan the Exit Barcode



