

IDAutomation SC7USB 2D: Enable FNC1 Decoding:

Scan Prefix code



Add Prefix

Scan 9 and 9 (hex for 99 = the prefix for all symbologies):



To decode FNC1, add the AIM ID (Manual p 131), scan 5, C, 8, 1:



5



C




8



1

To decode Symbology Code, add the Code ID (Manual p 131), scan 5, C, 8, 0:

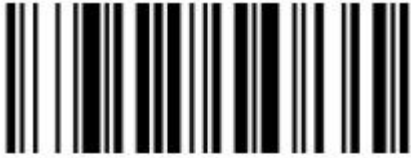

5



C



8



0

When done, save changes:



Save

To undo previous prefixes:



Clear All Prefixes

To reset scanner:



Reset Scanner to Default Settings